



# SOLARIG TUNNEL KIT

Installation Manual Model Compact

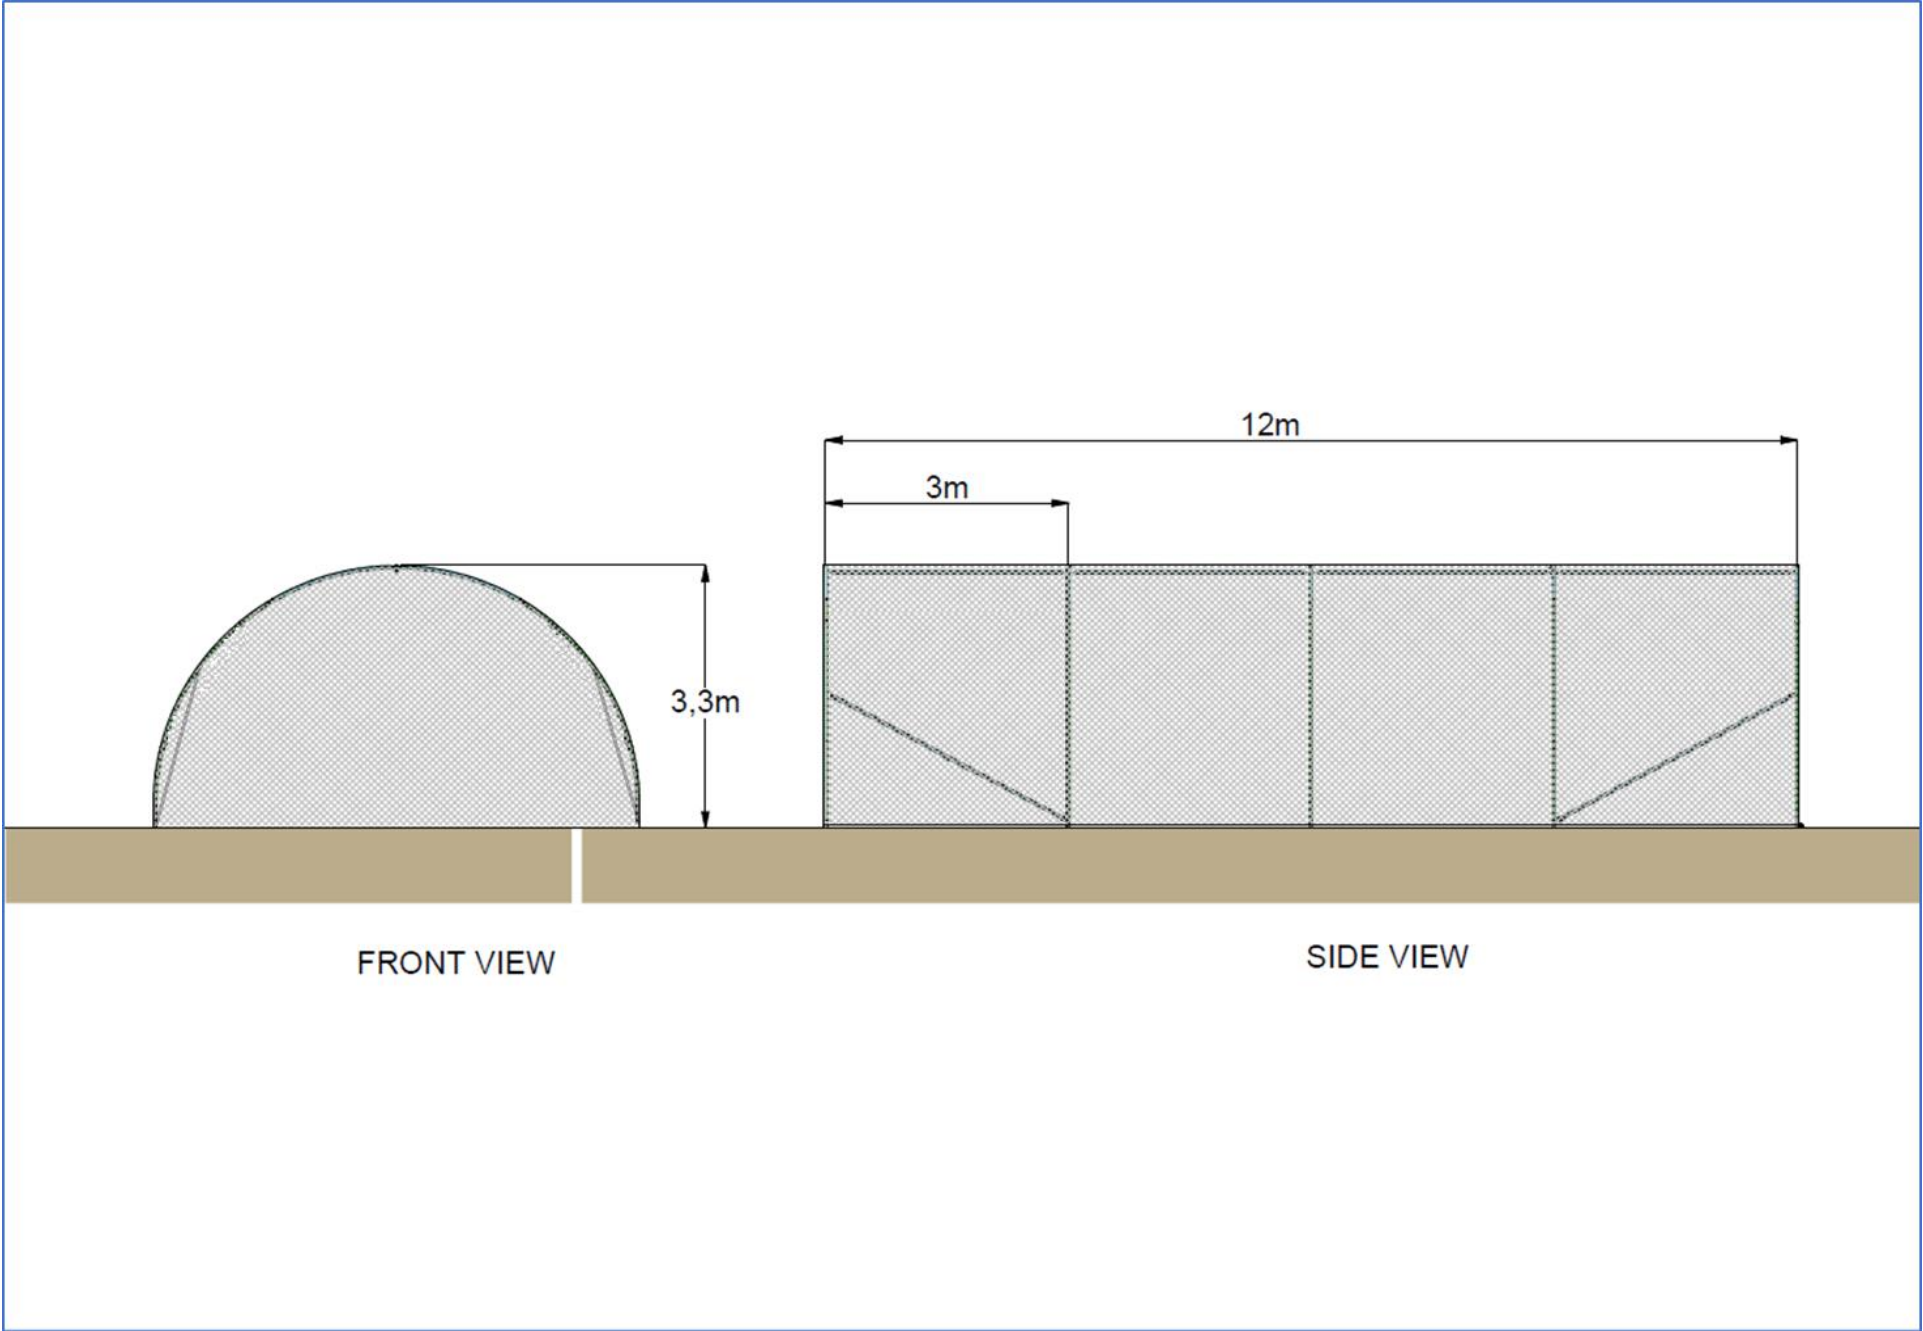




## STK 72 Compact Ground Marking Layout

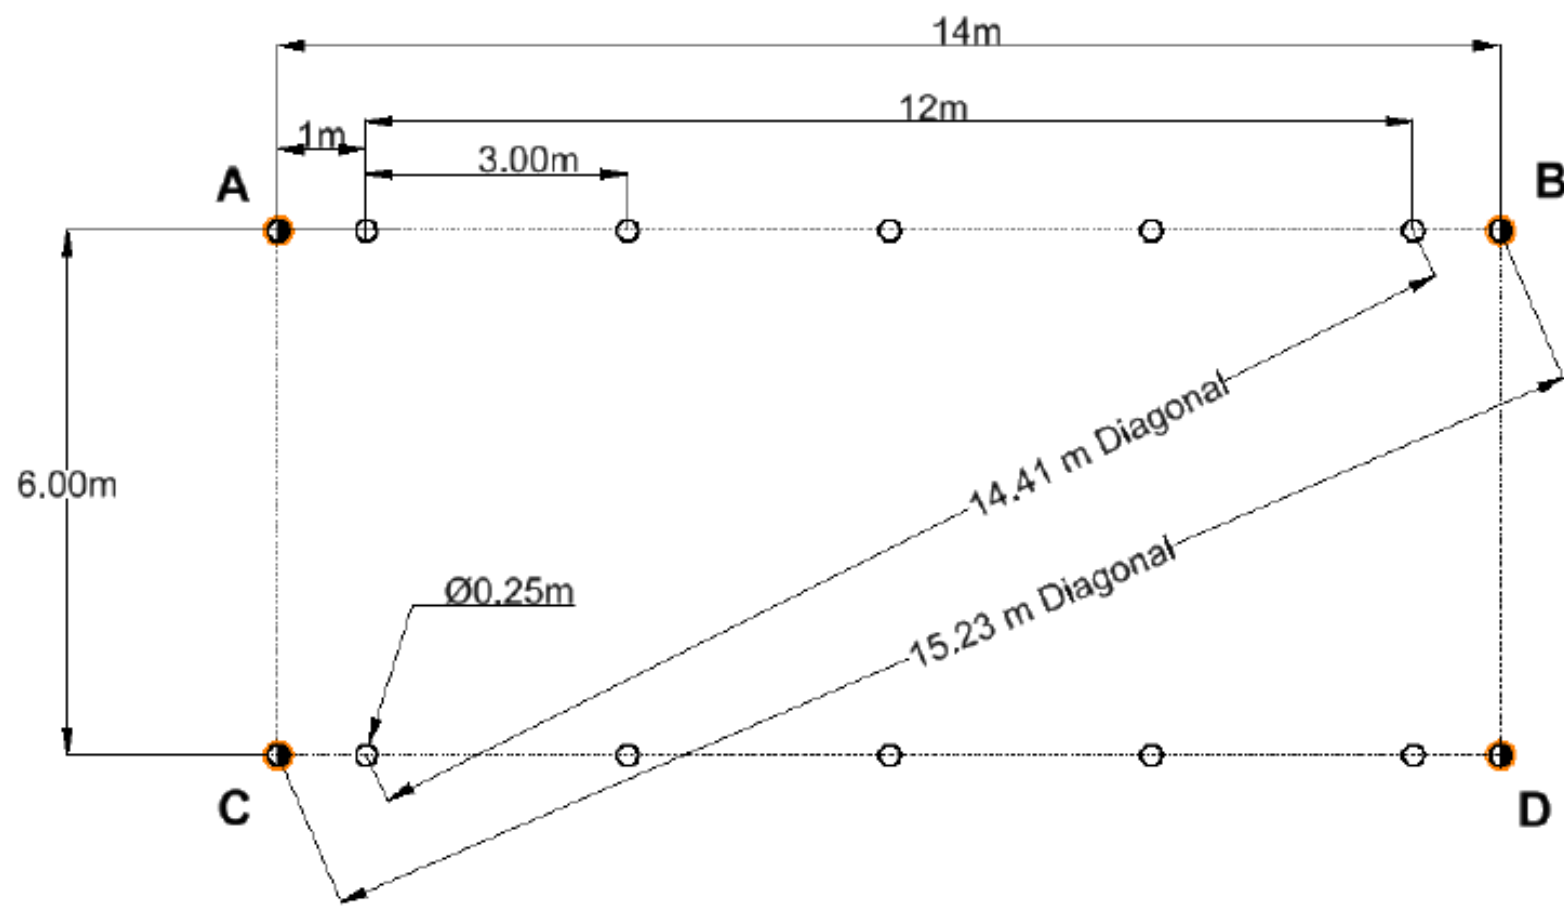

- - Marking for Diagonal Anchors (IA1260) -4units
- - Marking for Poles holes

### POST DIAGRAM & FOUNDATIONS DETAILS

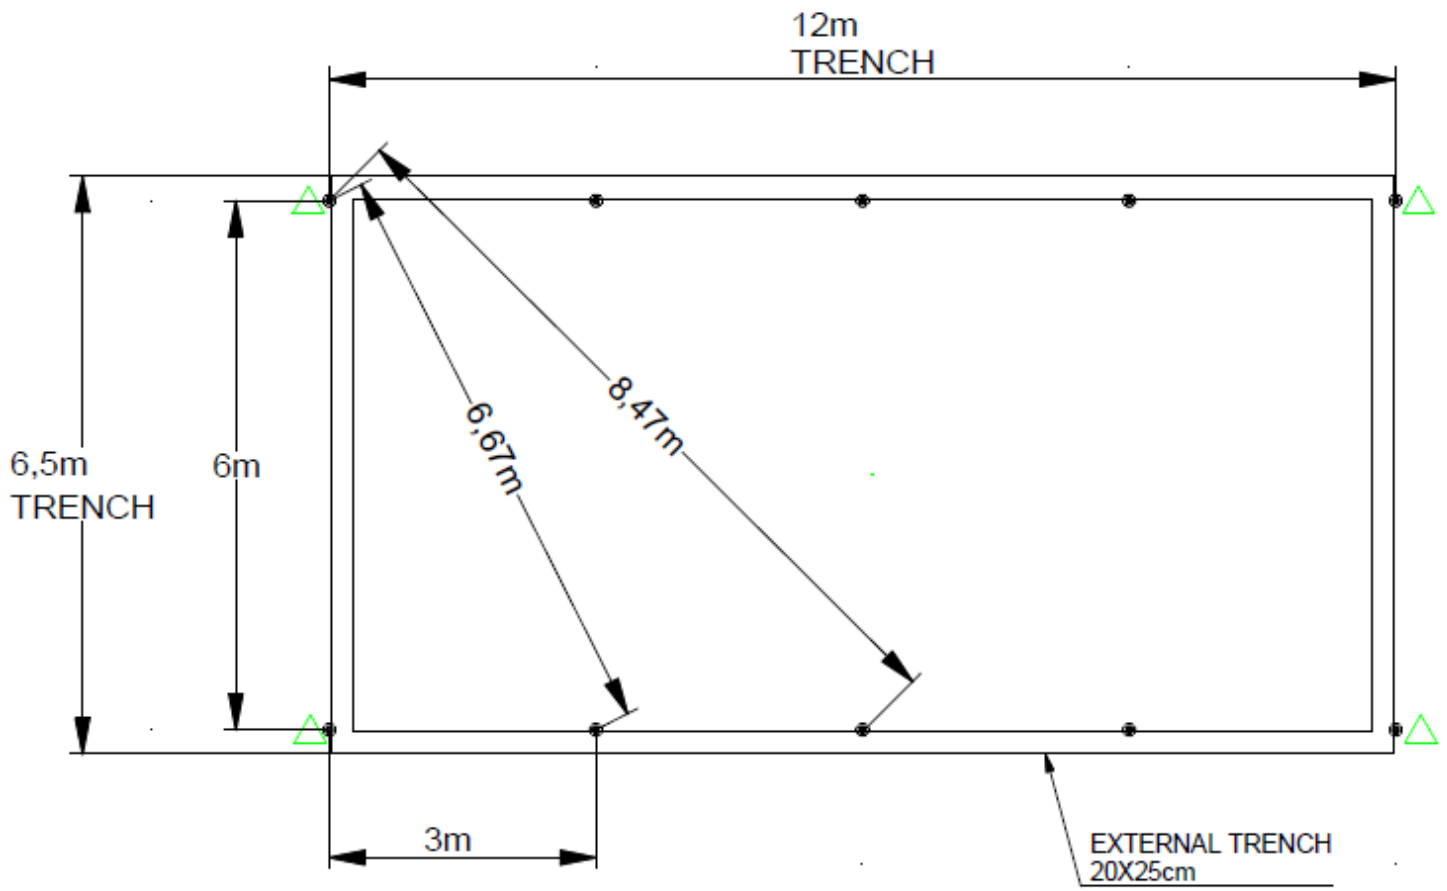

△ - ANCHOR (IA1260) 4units


## connecting frontal nets to frontal arcs


Front nets have a sleeve through which to insert the arc. Follow these rules:


- Face the logo outwards so it can be seen.
- Insert the arc gently to avoid tearing the net.
- Find the center, insert until the insertion opening is in line with the center of the arc.
- Treat front and back arcs identically.





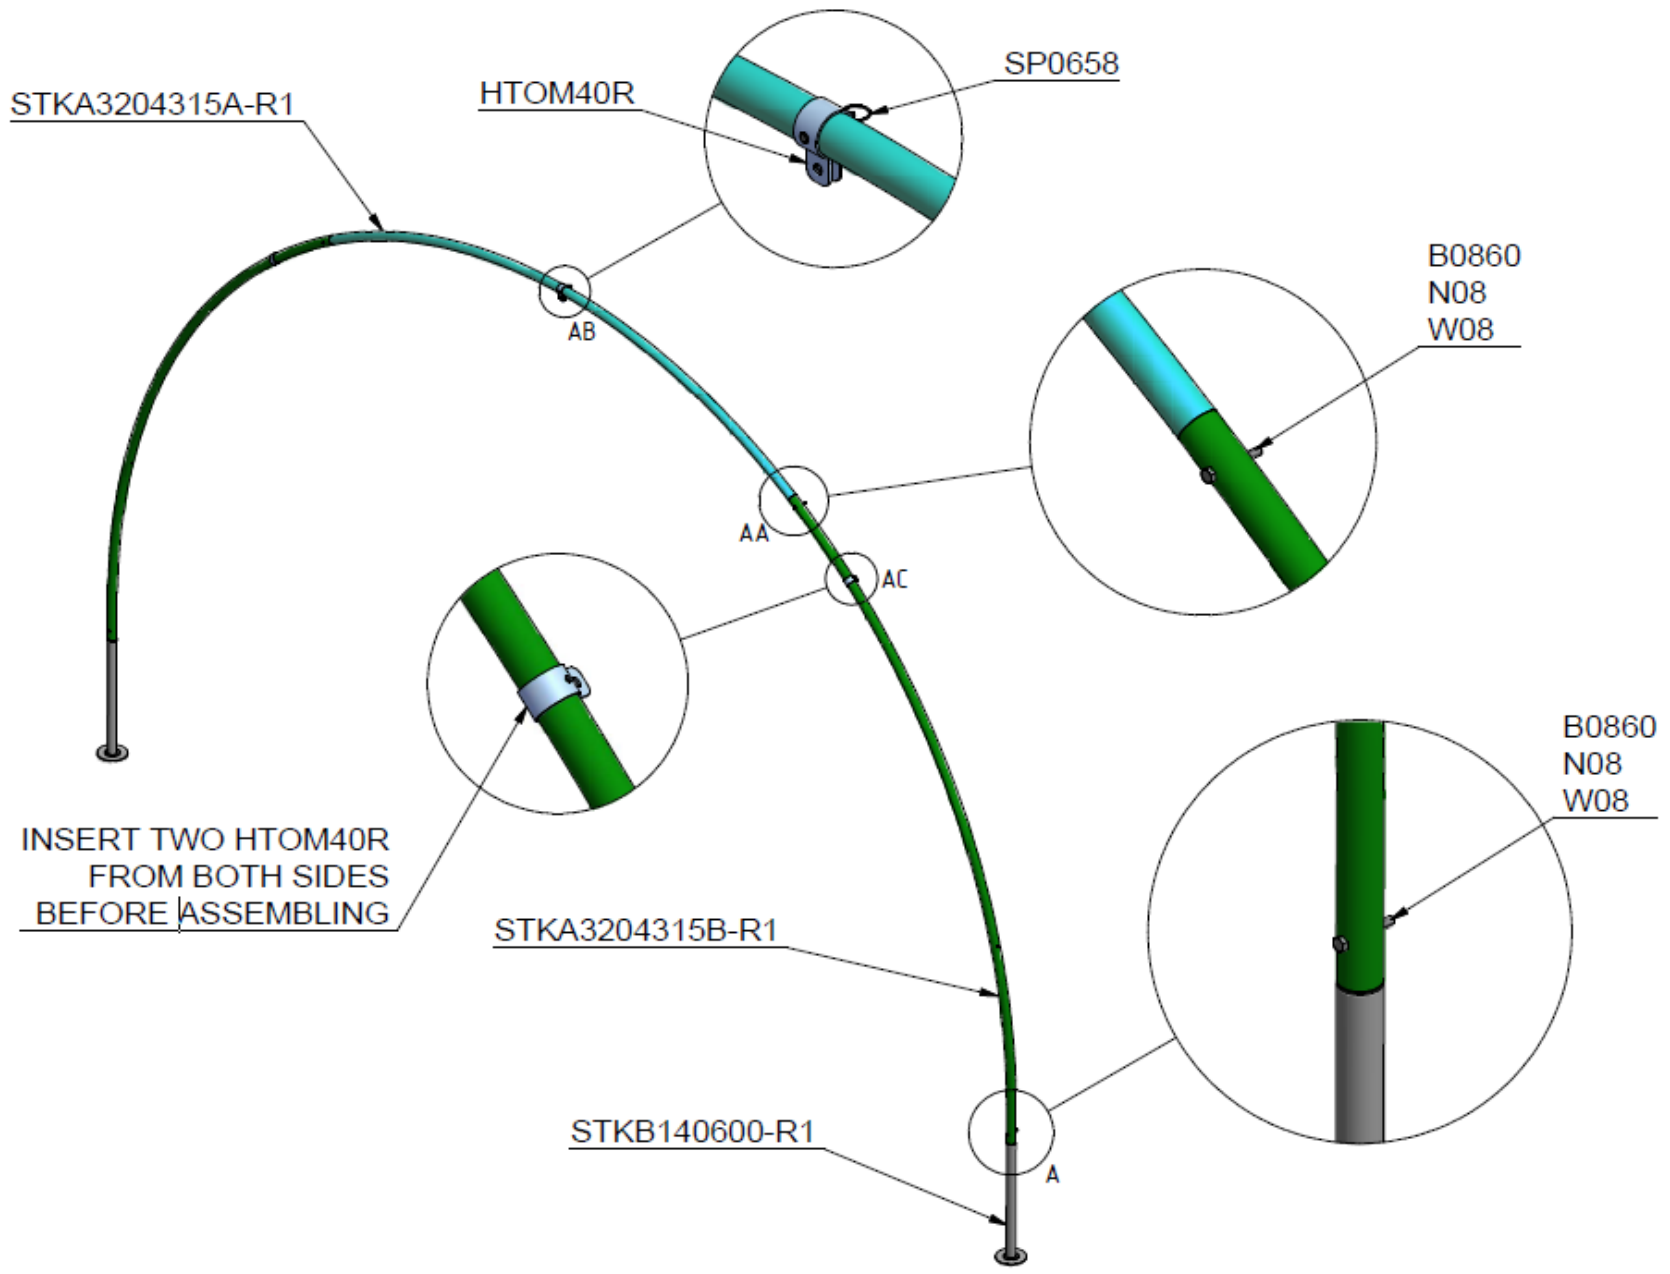


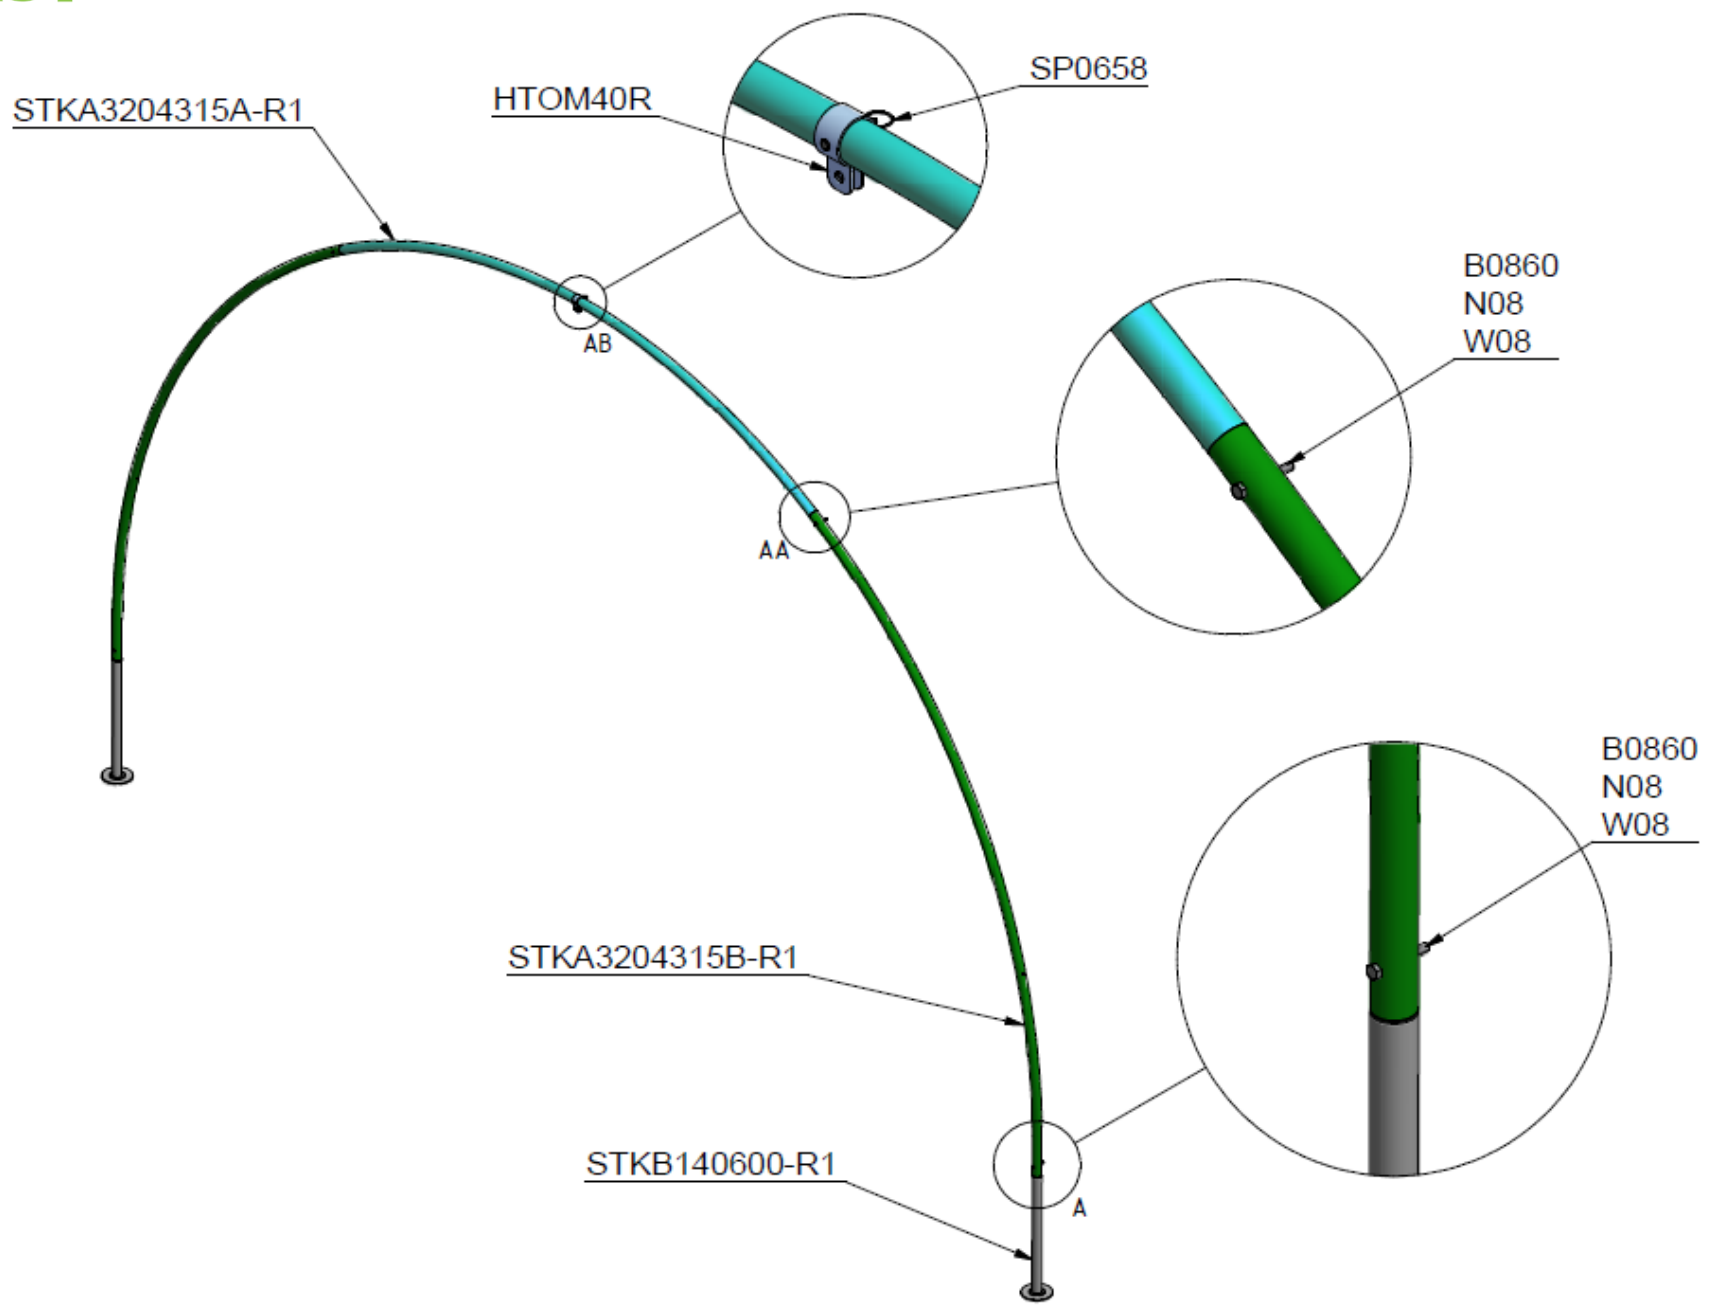


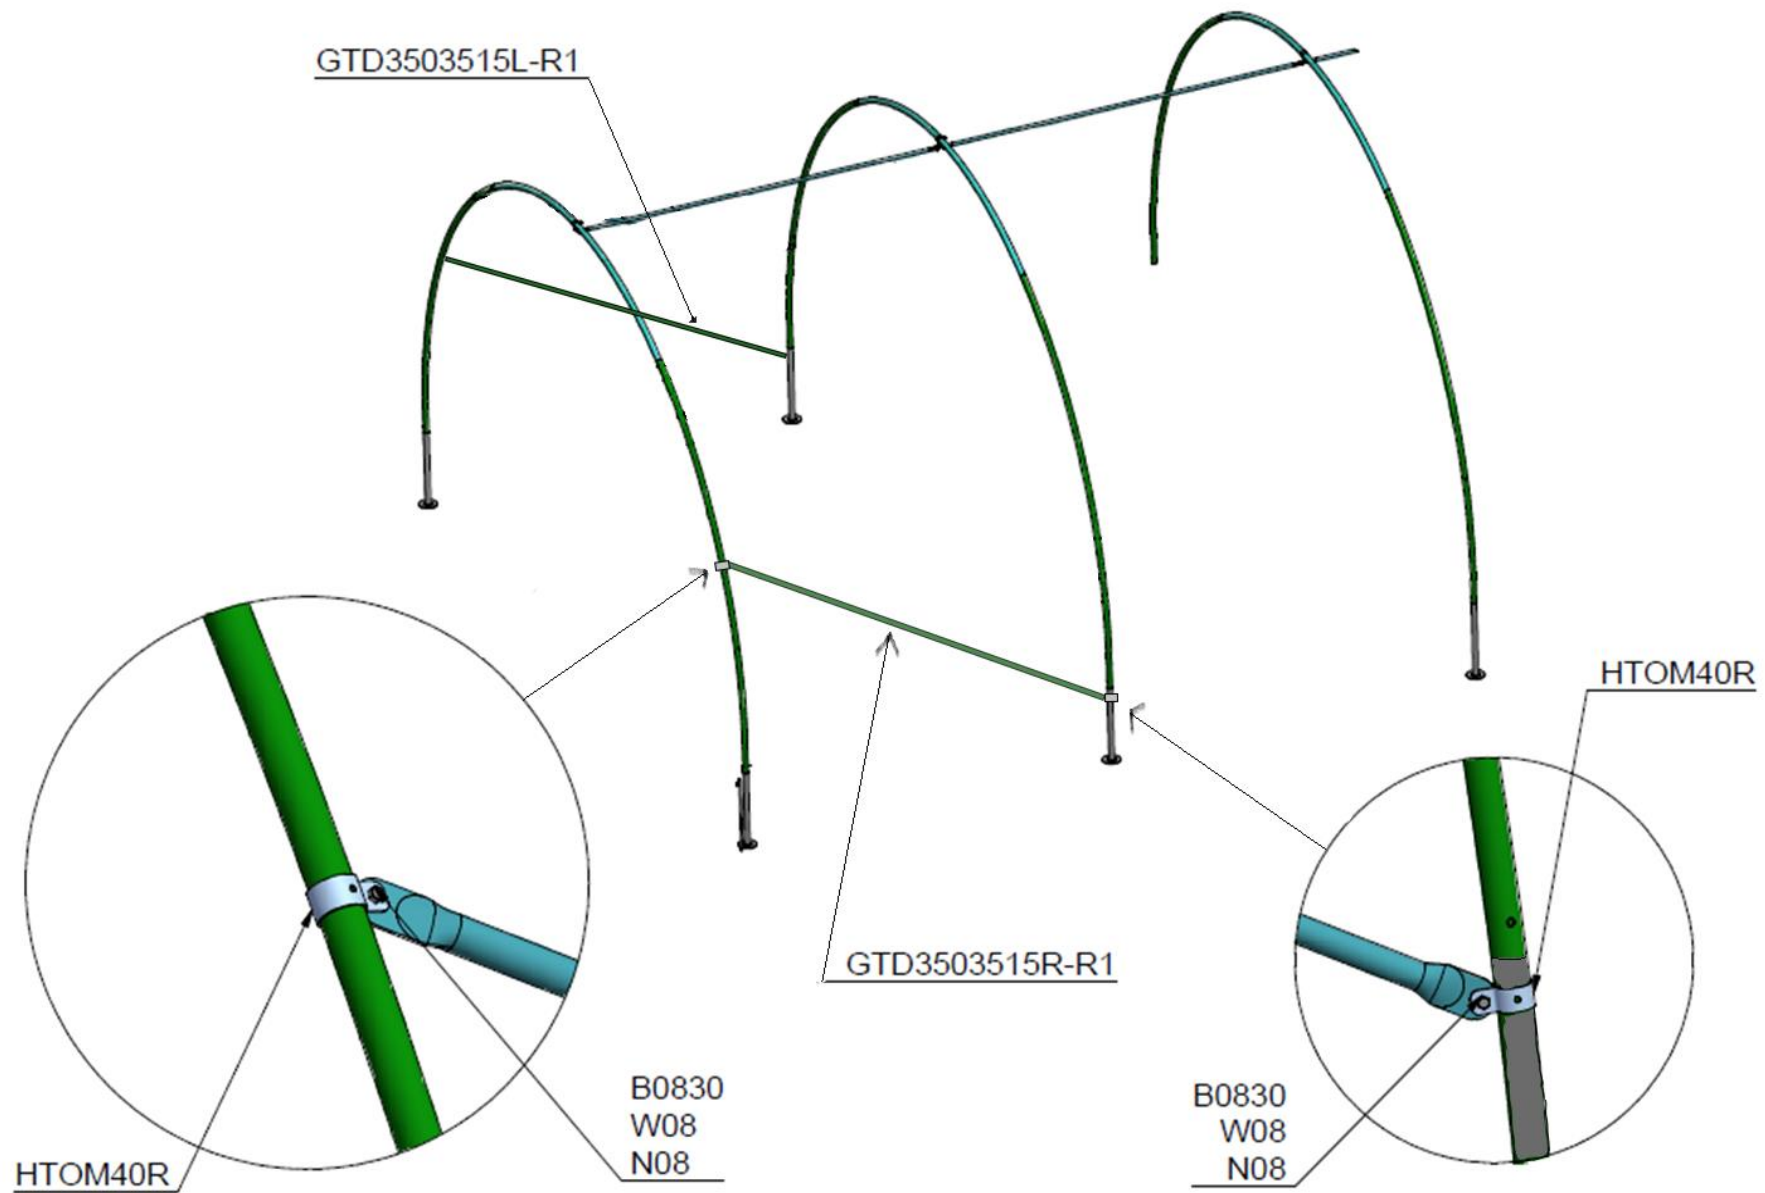






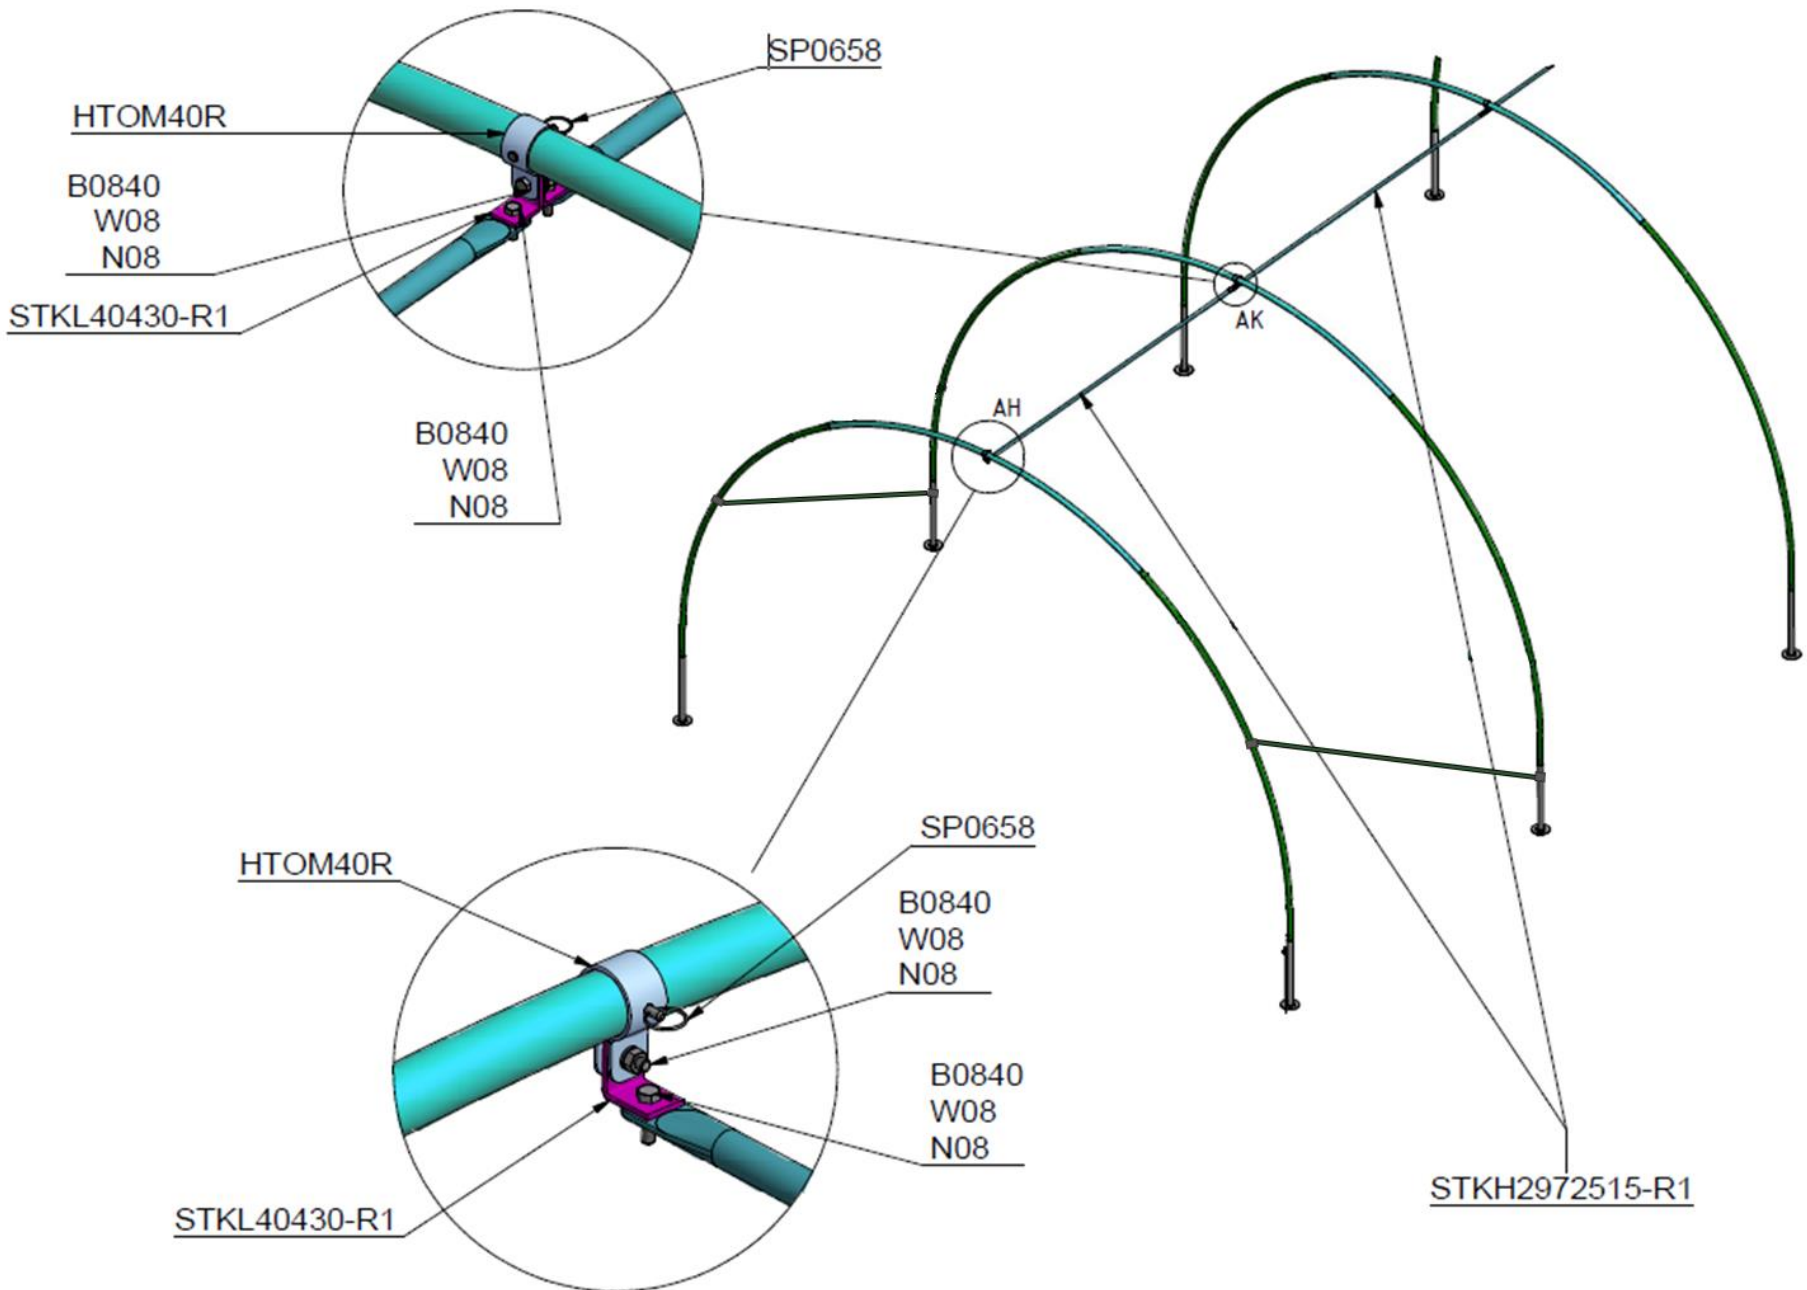

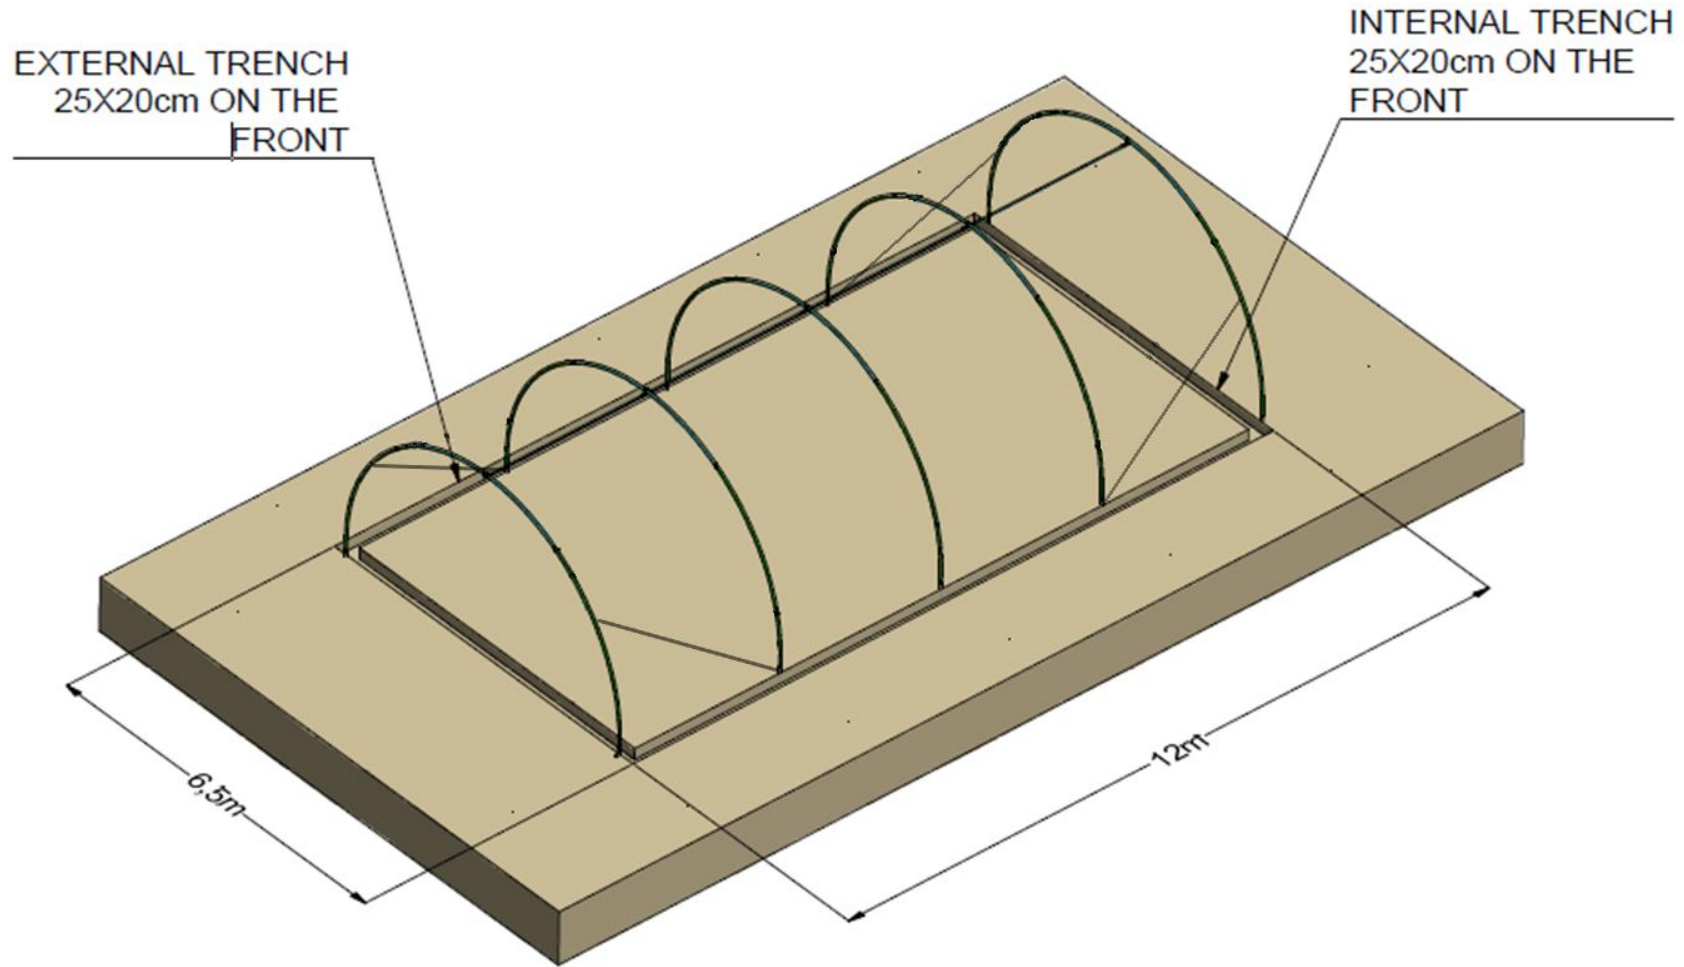




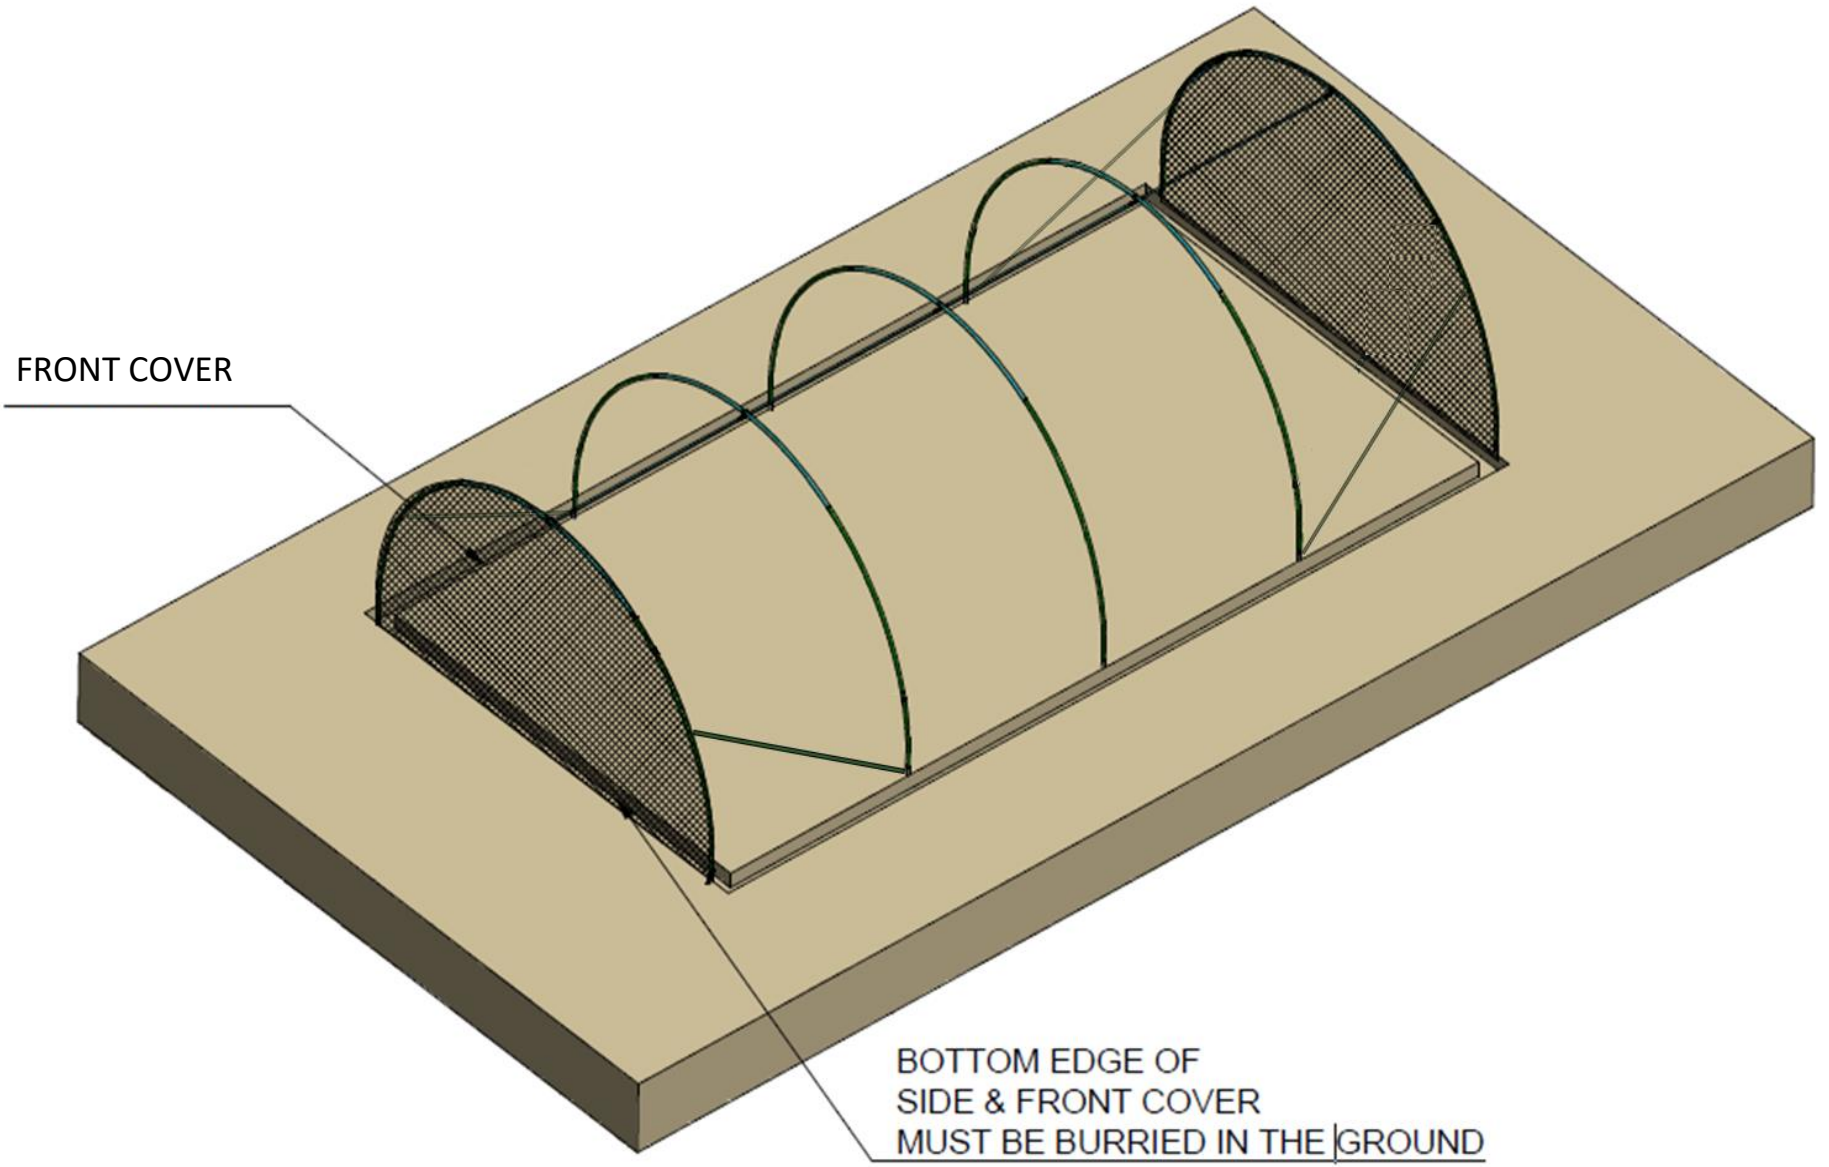


FRONT COVER

BOTTOM EDGE OF  
SIDE & FRONT COVER  
MUST BE BURRIED IN THE GROUND

ROOF COVER

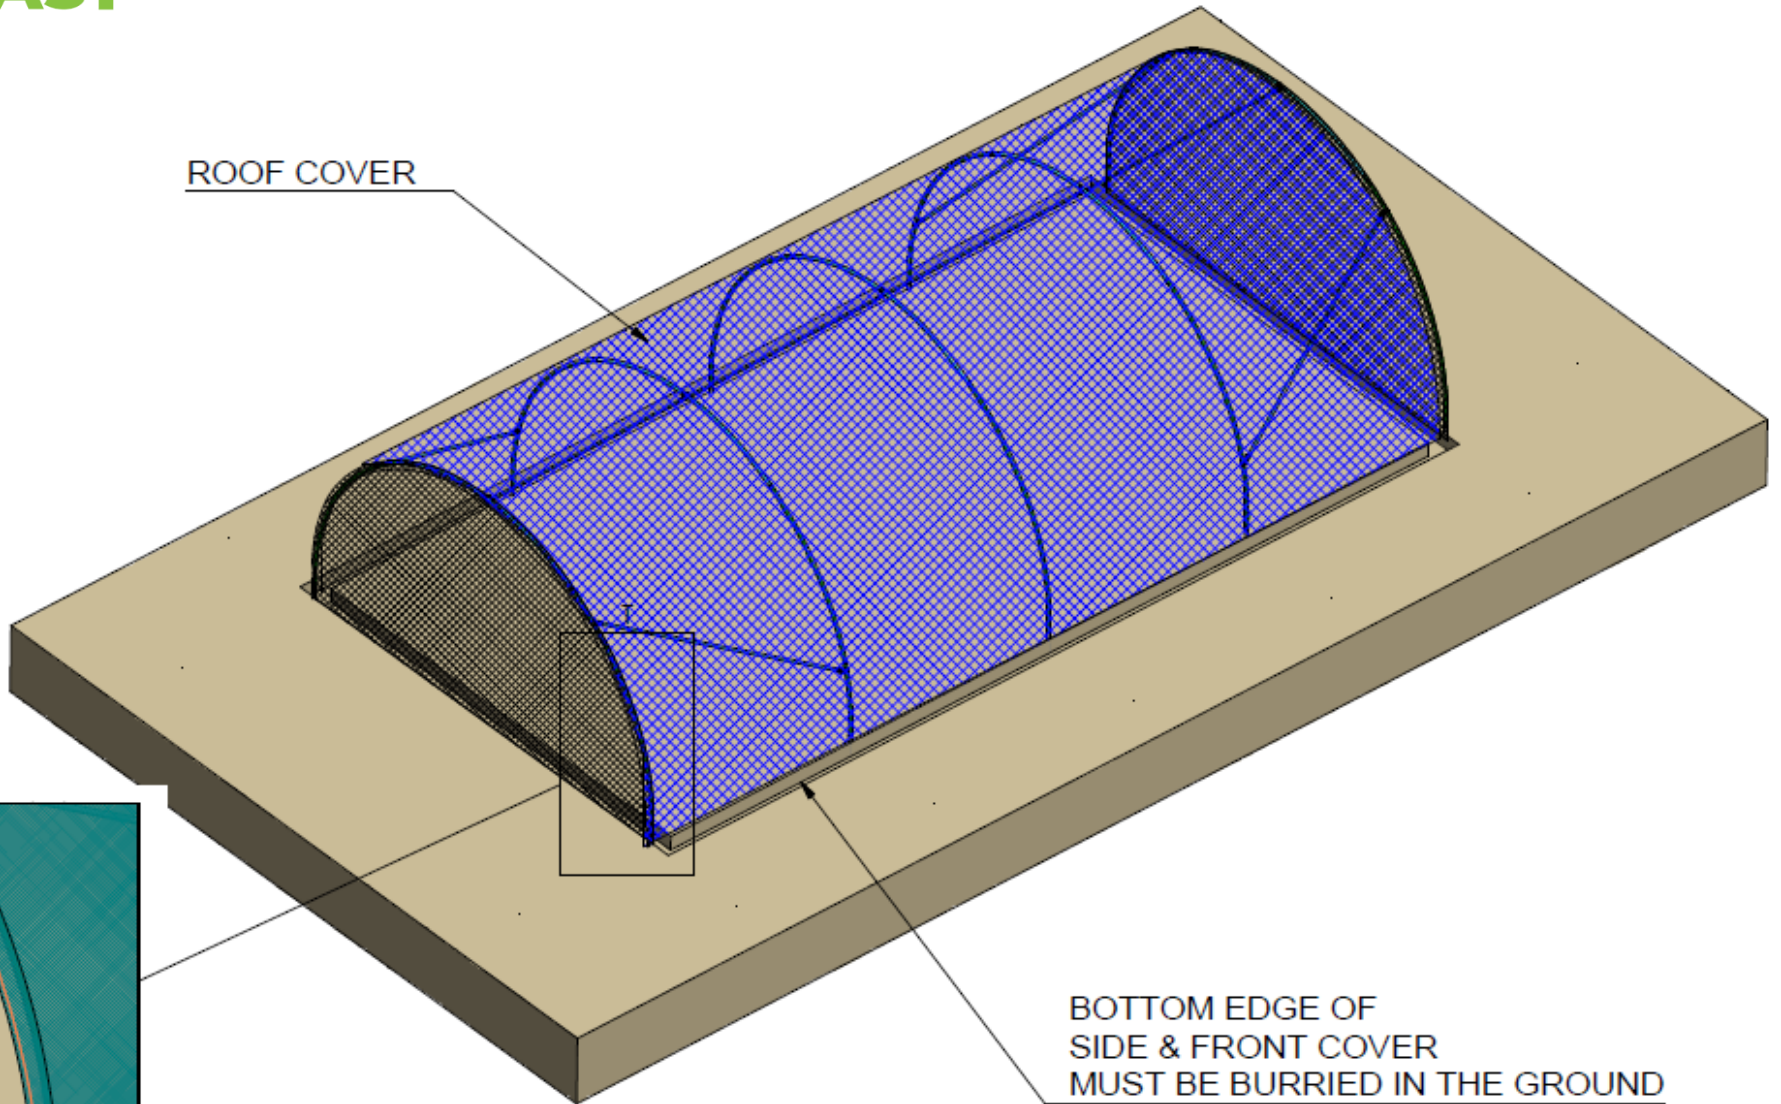

BOTTOM EDGE OF  
SIDE & FRONT COVER  
MUST BE BURIED IN THE GROUND

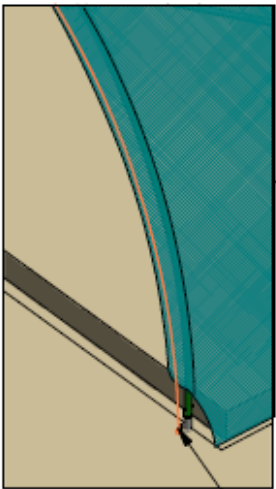

IA1260 ANCHOR